4010DUO User's Manual (V2.3)

Index

User Notice ..... **- 3 -**
- Safety Notes ..... - 3 -
- Copyright ..... - 3 -
- 4010DUO Special Features ..... - 4 -
- Appearance Parameters ..... - 4 -
- Specifications ..... - 4 -

Device Introduction ..... **- 5 -**
- 4010DUO Parts & Interface Introduction ..... - 5 -
- 4010DUO Buttons Function & Icons Description ..... - 5 -
- 4010DUO Standard Accessories ..... - 7 -
- 4010DUO Optional Accessories ..... - 7 -

The Order of Connection for Charger ..... **- 8 -**
- The Power Input Ground cannot be Connected With the Output Ground ..... - 8 -
- Single-channel (CH1 or CH2) Connection Notes ..... - 8 -
  - Connection for One Battery Pack ..... - 8 -
  - Connection for Two Battery Packs ..... - 8 -
- Dual-channel Connection Notes ..... - 9 -
  - Channel Asynchronous Mode ..... - 9 -
  - Channel Synchronous Mode ..... - 9 -

iCharger Charge/Discharge Setup & Use ..... **- 10 -**
- Power Supply Setup ..... - 10 -
- Program Add & Manage ..... - 11 -
- Run Program for Charger ..... - 11 -
- Program Running Status ..... - 12 -
- Error Messages ..... - 13 -
- Program Edit ..... - 13 -
  - LiXX Battery Charge/Discharge Setup ..... - 14 -
    - LiXX Battery Charge Setup ..... - 14 -
      - LIXX Battery Not Balance Charge Setup ..... - 15 -
      - LIXX Balance Charge Setup ..... - 15 -
      - LiXX Battery Charge Advanced Setup ..... - 16 -
      - LiXX Battery Charge Safety Setup ..... - 16 -
    - LiXX Battery Storage Setup ..... - 17 -
    - LiXX Battery Discharge Setup ..... - 17 -
      - To channel Setup ..... - 17 -
      - LiXX Battery Discharge Advanced Setup ..... - 18 -
      - LiXX Battery Discharge Safety Setup ..... - 18 -
    - LiXX Battery Cycle Setup ..... - 18 -
    - LiXX Battery Only Balance Feature ..... - 18 -
  - NiXX Battery Charge/Discharge Setup ..... - 19 -

- ❑ NiXX Battery Charge Setup ..... - 19 -
  - ➲ NiXX Battery Charge Advanced Setup ..... - 19 -
  - ➲ NiXX Battery Charge SafetySetup ..... - 20 -
- ❑ NiXX Battery Discharge Setup ..... - 20 -
  - ➲ NiXX Battery Discharge Safety Setup ..... - 20 -
- ❑ NiXX Battery Cycle Setup ..... - 20 -

◆ Pb Battery Charge/Discharge Setup ..... - 20 -
- ❑ Pb Battery Charge Setup ..... - 21 -
  - ➲ Pb Battery Charge Advanced Setup ..... - 21 -
  - ➲ Pb Battery Charge Safety Setup ..... - 21 -
- ❑ Pb Battery Discharge Setup ..... - 21 -
- ❑ Pb Battery Cycle Setup ..... - 21 -

4010DUO Parameters Setup ..... - 22 -

● 4010DUO Parameters Setup ..... - 22 -

◆ Charger Setup ..... - 22 -
- ❑ Temp. & Fans Setup ..... - 22 -
- ❑ Beep Tone Setup ..... - 23 -
- ❑ LCD Setup ..... - 23 -
- ❑ Output Power Setup ..... - 23 -
- ❑ Power Supply Setup ..... - 24 -
- ❑ Save & Load Configuration Setup ..... - 24 -
- ❑ Calibration ..... - 25 -

◆ Extra Function ..... - 26 -
- ❑ Log Files Manage ..... - 26 -
- ❑ Servo Test ..... - 26 -
- ❑ Pulse Measurement ..... - 28 -

● USB & SD Card Use ..... - 28 -

● Warranty & Service ..... - 28 -

4010DUO Firmware Upgrades ..... - 29 -

Use Logview for 4010DUO ..... - 31 -

Important Notes ..... - 33 -

● Reflex Charge Mode: ..... - 33 -

● Power Regenerative Mode: ..... - 33 -

● Channel Regenerative Mode: ..... - 33 -

● Lithium Battery Extra Discharge Mode: ..... - 34 -

Appendix ..... - 35 -

● Status Indication of Running Channel ..... - 35 -

● Status Indication of Channel Control ..... - 35 -

● Error Messages ..... - 36 -

User Notice

Safety Notes

Please read the entire Manual completely before using, to make sure you can use this device properly and more safely.

1. 4010DUO is a dual port charger, but this does not mean you can charge/discharge any configuration of the two sets of batteries! You must follow these rules: two battery packs without any external electrical connections, otherwise they could permanently damage the charger or batteries. For example: when charging a 12-cell battery pack, you must split it into two separate 6-cell, and you must never charge two 6-cell battery packs in series by connecting with CH-1 and CH-2 respectively.

2. 4010DUO input power cannot have fast voltage/current fluctuations, which may cause output over current, and will damage the charger and/or the batteries and input power source in extreme cases. For example: setting the input protection current and voltage is necessary according to the specifications of the input power supply, in order not to cause power overload. Some power supply overload protection circuits will produce substantial fluctuations in the supply voltage.

3. Keep the charger away from children and pets at all times.
4. Never leave the charger unsupervised when charging or discharging. If you leave, disconnect the battery and switch off charger to prevent any unexpected dangers or damage.
5. Ensure the charger program and settings match the battery pack otherwise the battery will be damaged and a dangerous situation may arise, especially for Lithium batteries, which may cause a fire.
6. Do not mix batteries of different types, different capacities or from different manufacturers.
7. Do not disassemble the charger.
8. Do not place the charger or any battery on a flammable surface or near a combustible material while in use. Do not charge or discharge on a carpet, cluttered workbench, paper, plastic, vinyl, leather or wood, inside an R/C model or inside a full-sized automobile.
9. Never block the air intake holes and never use in a refrigerated or high temperature environment. If used in such an environment, the internal temperature protection may result in abnormal charging/discharging that could be dangerous.
10. Do not allow water, moisture, metal wires or other conductive material into the charger.
11. Never charge or discharge any battery having evidence of leaking, expansion/swelling, damaged outer cover or case, color-change or distortion.
12. Do not try to charge “non-rechargeable” dry cells.
13. Do not exceed the battery manufacturer’s suggested maximum charge rates.
14. Carefully follow the battery pack manufacturer’s recommendations and safety advice.

Copyright

Copyright@ Shenzhen New Junsi Electronic Co., Ltd. All rights reserved.

Without prior written consent by Shenzhen New Junsi Electronic Co., Ltd, any units or individual extracts or copies of part or the entire contents of this manual, and transmission in any form is illegal and strictly prohibited.

The product described in this manual may include copyright software ownership belonging to Shenzhen New Junsi Electronic Co. Ltd and its licensee, except with the express permission from relevant rights holders, otherwise,

any copying, distribution, modification, excerpt, de-compilation, disassembly, decryption, reverse engineering, lease, transfer, sub-license, as well as other acts of infringement of software copyright is strictly prohibited, but apart from the restrictions prohibited by applicable law.

● 4010DUO Special Features

1. The 4010DUO uses advanced Synchronous buck-boost DC/DC converter technology, high power, a high current and high-performance power conversion circuit. The maximum charge power capacity is up to 2000W, the maximum charge/discharge current of a channel is up to 40A, and two channels in Synchronous Mode are up to 70A.
2. Channel Supports 10s LiPo, Lilo, LiFe, with maximum 1.2A balance current, and adopts a unique balance calculation of internal resistance correction.
3. Intelligent fan control. Sensing internal temperature via the internal temperature sensor, to thereby control the fan speed.
4. Internal temperature protection. When the internal temperature exceeds the Power Reduce temperature, the output power is automatically reduced; and the charger will shut down when temperature exceeds the Shut-down temperature.
5. 64 parameters sets can be saved, without repeat setting when in use, just import/export via SD card.
6. A TFT LCD screen provides rich information including current, voltage, power, capacity, internal resistance, control status, time-consuming and temperature, etc.
7. Multi-discharge features: self-discharge, regenerative to input discharge, regenerative to channel discharge, and lithium battery extra expanding discharge.
8. Supports measurement for internal resistance of battery offline and online. Can measure not only the internal resistance of the entire battery pack, but also measure the internal resistance of each cell within the lithium battery.
9. The iCharger has protection for reversed polarity (input or output), input voltage/current, battery temperature, charging capacity, overrun time and maximum power etc.
10. Supports upgrading the hardware program by USB port. The iCharger also supports the “Logview” software and can display, plot and analyze the charge and discharge data by it. (See detail information about Logview at the following website: http://www.logview.info)

● Appearance Parameters

Net weight:	1.47kg
Dimension:	210.0×140.1×80.2 ±0.5mm

● Specifications

Input voltage range:	9.0—50.0VDC
Maximum input current limit:	<65A
Maximum charge/discharge current:	70A@Syn. Mode 40A@Asyn. Mode
Maximum charge power capacity:	2000W (Channel 1400W @input > 23.5V)
Maximum discharge power capacity:	200W (Channel 130W)
Maximum regenerative discharge power capacity:	2000W (Channel 1400W)
Maximum extra discharge power capacity:	3200W (Channel 1600W @40V/40A)
Maximum current drain for balancing:	2.4A@Syn. Mode 1.2A@Asyn. Mode

Device Introduction

4010DUO Parts & Interface Introduction

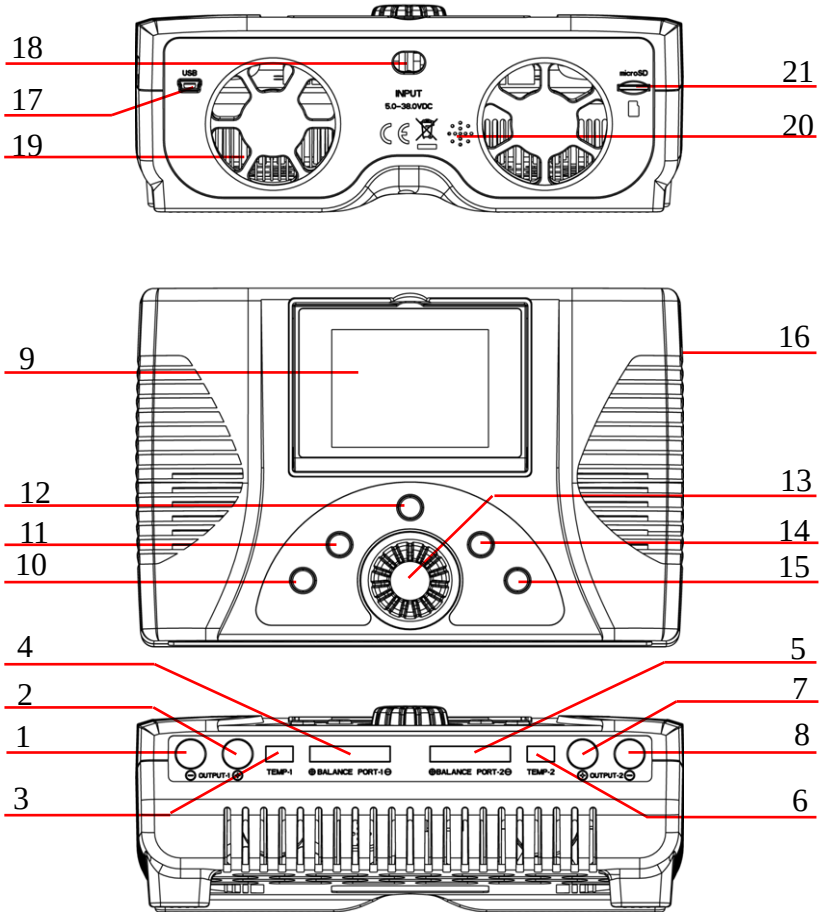

（1）OUTPUT-1 -
（2）OUTPUT-1 +
（3）TEMP-1
（4）BALANCE PORT-1
（5）BALANCE PORT-2
（6）TEMP-2
（7）OUTPUT-2 +
（8）OUTPUT-2 -

（9） LCD
（10）STOP/START-1
（11）STATUS-1
（12）TAB/SYS
（13）KNOB
（14）STATUS-2
（15）STOP/START-2
（16）J1,J2 PORT

（17）USB
（18）POWER OUTPUT LINE
（19）FAN
（20）BUZZER
（21）SD CARD SLOT

4010DUO Buttons Function & Icons Description

Buttons allow quick access to certain features when using 4010DUO, familiarity with the icons on the interface will help you better understand the working status of the charger, as shown in following chart:

Name	Functions & Use
KNOB	Press: confirm Counterclockwise rotation: up Clockwise rotation: down Long press: pop up manage menu via long press on *BATTERY MEMORY SELECTION* interface exit the program after saving via long press on *BATTERY SETUP* interface
TAB/SYS	Long press: enter *SYSTEM MENU* via long press on initial interface, and return to the previous menu via long press on the rest interface Click: can act as backspace when editing memory name on *MEMORY SETUP*, and return to the previous menu via clicking on the rest interface

STATUS-1	Long press: measure internal resistance of CH-1 via long press on initial interface, and to pop up the parameters setup interface via long press when running program Click: switch to the information display of CH-1
STATUS-2	Long press: measure internal resistance of CH-2 via long press on the initial interface, and to pop up the parameters setup interface via long press when running program Click: switch to the information display of CH-2
STOP/START-1	Click: Click on the initial interface to enter *CH-1-BATTERY MEMORY SELECTION*, and click again to return the initial interface Long press: long press on the initial interface to enter the last running program of *Run Program* on CH-1, and long press again to run the selected program
STOP/START-2	Click: Click on the initial interface to enter *CH-2-BATTERY MEMORY SELECTION*, and click again to return the initial interface Long press: long press on the initial interface to enter the last running program of *Run Program* on CH-2, and long press again to run the selected program
STATUS-1+STOP/START -1	Press simultaneously on initial interface to enter *CH-1-MONITOR SETTINGS* on CH-1
STATUS-2+STOP/START -2	Press simultaneously on initial interface to enter *CH-2-MONITOR SETTINGS* on CH-2
STOP/START -1+STOP/START -2	Long press simultaneously on *Run Program* interface, two channels will run the same program simultaneously
	Fan status: a. Grey shows not running b. Green shows running (the higher the green shows, the faster the fan runs, and vice versa)
	SD card status: a. Grey shows the SD card is not inserted b. Green shows the SD card has been inserted and can be used normally
	USB status: a. Grey for no USB connection b. Green for USB connection

4010DUO Standard Accessories

USB data line #1 700mm	Power cable #1 600mm
Standard mini USB data line	Power input cable
Balance connector conversion board #2 70X44mm	Output cable #2 320mm
Suit for Align/Dualshy battery etc.	Banana gold plug power output cable (single channel)
Balance wire for balance board #2 150mm	CD-ROM #1
Suit for Align/Dualshy battery etc.	User's manual & Software
Anti-slip rubber feet #4 	
Anti-slip rubber feet to prevent the charger slipping.	

4010DUO Optional Accessories

Temperature sensor lead #2 350mm	Dual balance wires for balance board #2 150mm
XP2.54 interface temperature sensor lead	11Pin-11Pin dual balance wire
Dual channel output cable #1 350mm	
Banana gold plug power output cable (two channels)	

The Order of Connection for Charger

● The Power Input Ground cannot be Connected With the Output Ground

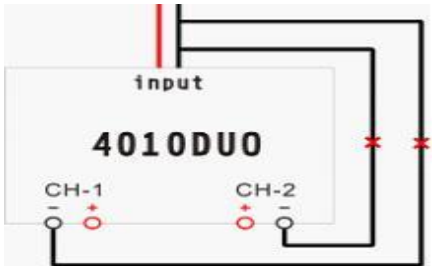

Note: The input of power lead cannot be connected directly to the output (see left picture), and the voltage of the input power supply cannot have large instantaneous fluctuations, otherwise the charger will be damaged.

● Single-channel (CH1 or CH2) Connection Notes

◆ Connection for One Battery Pack

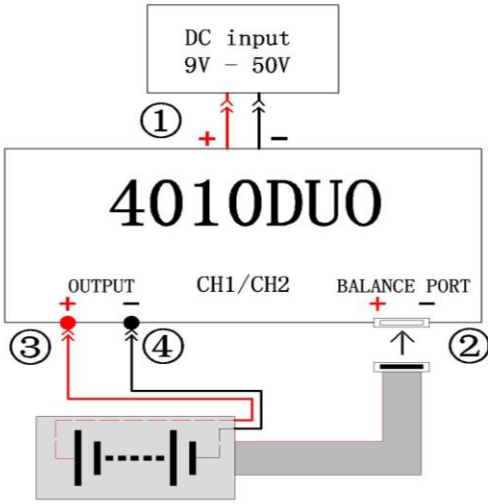

Note: The left picture shows the correct order of connection, please follow the order.

1.The spark is a normal phenomenon when connect with the power supply, and the higher the input power source, the greater the spark; you can power off first, connect the step①, then power on to avoid spark.

2. If connect in reverse order(step②, ③, ④, ⑤), It will cause a greater spark when connect with battery.

◆ Connection for Two Battery Packs

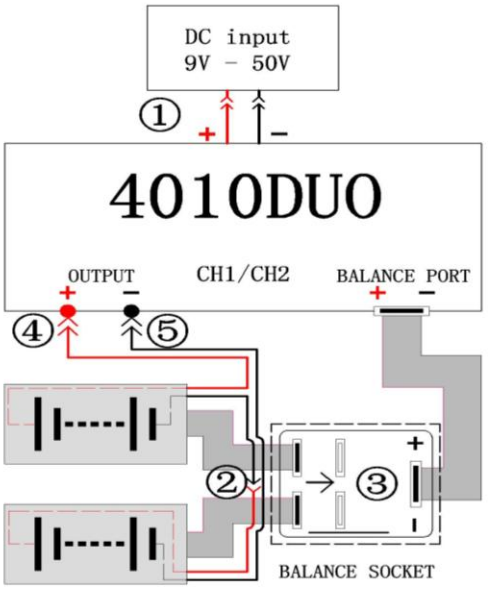

Note: The left picture shows the correct order of connection, please follow the order.

1.The spark is a normal phenomenon when connect with the power supply, and the higher the input power source, the greater the spark; you can power off first, connect the step①, then power on to avoid spark.

2.If connect in reverse order(step②, ③, ④, ⑤), It will cause a greater spark when connect with battery.

3.If step ④, ⑤ connected at first, next you must connect step ②, and then connect step ③, otherwise it will cause damage to the BALANCE PORT interface of the charger.

● Dual-channel Connection Notes

◆ Channel Asynchronous Mode

Channel Asynchronous Mode: i.e. CH-1 and CH-2 work independently.
Go to *MEMORY SETUP→Option→Channel Mode* to select *Asynchronous.*

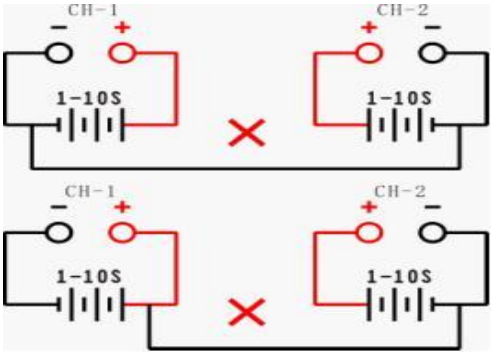

Picture1: Error Connection

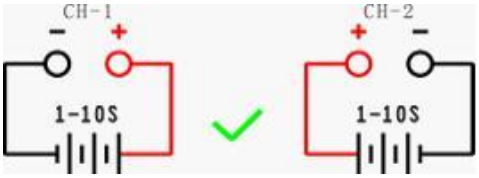

Picture2: Correct Connection

Note: In this mode, the two channels must not have any external electrical connection; otherwise it will damage the charger. You cannot charge with connection shown in picture 1, the correct connection is shown in picture2.

◆ Channel Synchronous Mode

Channel Synchronous Mode: i.e. CH-1 & CH-2 are controlled at the same time to charge/discharge one battery pack.
Go to *MEMORY SETUP→Option→Channel Mode* to select *Synchronous.*
In this mode, the maximum current can be up to 70A, power capacity is the sum of both channels' limits.

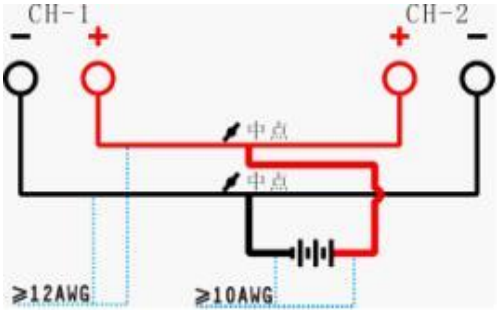

Note: The two channels charge one battery pack simultaneously must be connected as shown in picture 3 and the two channels must work in synchronous mode, otherwise the charger will be damaged.

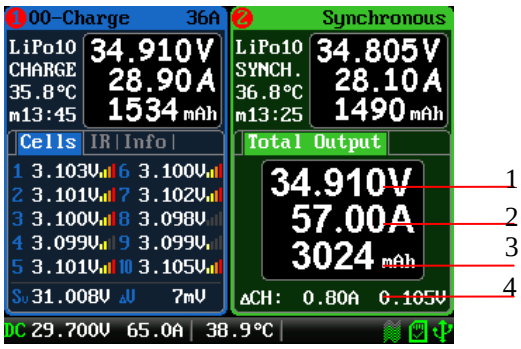

1: The total voltage of dual-channel
2: The total current of dual-channel
3: The total capacity of dual-channel
4: Channel current & voltage difference

iCharger Charge/Discharge Setup & Use

4010DUO iCharger can charge/discharge LiPo, Lilo, LiFe, NiHM, NiCd and Pb batteries, this manual is divided into three parts to explain and introduce the charger's features for LiXX, NiXX and Pb batteries.

● Power Supply Setup

The charger boots automatically when the power is turned on and the initial interface will display LOGO, charger relevant information, power source and message etc.

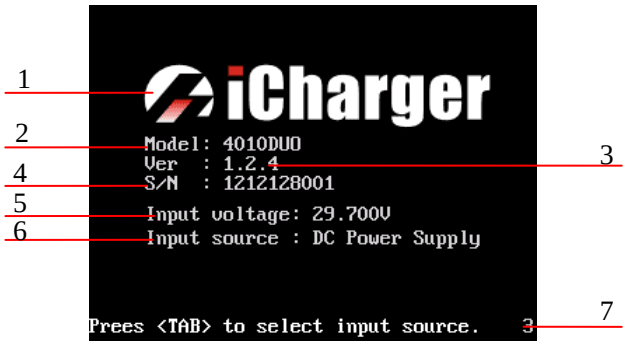

1: Logo
2: Model
3: Firmware version
4: Series number
5: Input power voltage
6: Input power source
7: Hint message

System will delay **5 seconds** after booting, during this period, press ***TAB / SYS*** button to change the input source type, while pressing any other buttons to enter the initial interface.

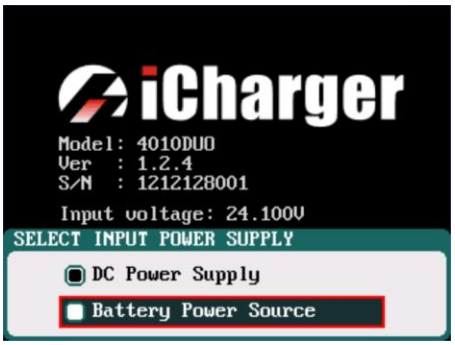

Note: Set type of input power supply in *SYSTEM MENU→Charger Setup→Power Supply*; see details on Page22 4010DUO Parameters Setup.

After selecting the input power supply, confirm and enter the initial interface.

1: CH-1Channel Information Display
2: CH-2Channel Information Display
3: Status Display

Note: The specific display of each region can refer to the introduction on Page12 & Page13 Program Running Status & Error Messages.

Program Add & Manage

Click ***STOP/START-x*** button on the initial interface to pop up the *BATTERY MEMORY SELECT* window.
4010DUO has 6 built-in programs before it enters to the market (shown in following picture), which cannot be deleted and are limited for editing. The built-in programs are underline to distinguish them from the customized programs set by the user.

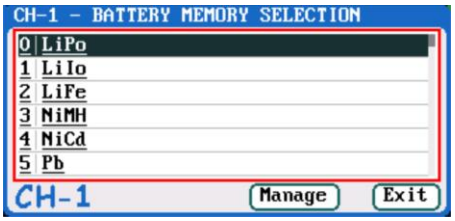

Click "Manage" (or long press ***KNOB***) to pop up the *MANAGE* after exiting focus via pressing ***TAB/SYS***, and click "Edit" to enter *MEMORY SETUP* to edit the program, or click "Add" to add new program and enter its editing interface at the same time.

Note: If the program selected is a built-in program, "*Copy From...*" and "*Delete*" options are shown as inactive status(grey), and unable to be set.

Run Program for Charger

After selecting program on *BATTERY MEMORY SELECTION*, click to enter *Run Program* interface (long press ***STOP/START-x*** button on the initial interface will enter *Run Program* from the last running program), as below:

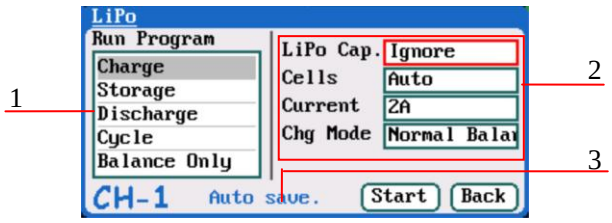

1: Run Program Selection
2: Common Parameters Setup
3. Auto- save Hint

Note: 1. The built-in program is saved by default automatically to the running program, while the program customized by the users can be set in *MEMORY SETUP→MEMORY OPTION→Auto save before the program runs.*

2. After setting the "capacity", the C-rate will appear behind the current, and when the C-rate exceeds the certain value, the system alarm will beep and warn (shown in the following picture). The specific value of the battery is: LiXX battery :> 3C, NiXX battery :> 2C, Pb battery :> 0.3C

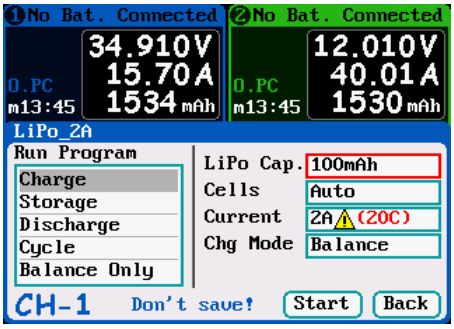

After selecting the program to run, click confirmation to pop up *RUN PROGRAM* window, as below:

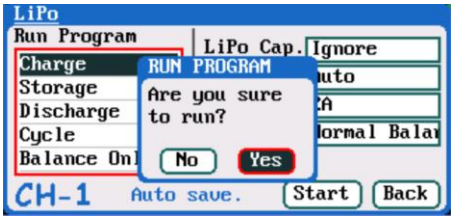

Click ***Yes*** to run the program, click ***No*** to cancel.

● Program Running Status

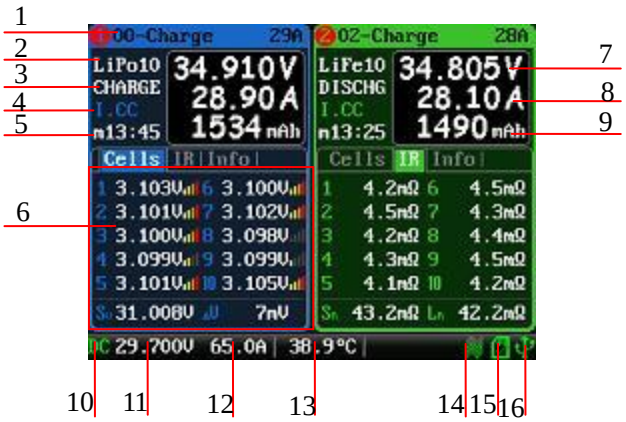

1: Running program name 2: Battery type
3: Running channel status
4: Channel control status/external temperature
5: Running program time
6: Multipage information
7: Output voltage 8: Output current
9: Output capacity 10: Power source
11: Input voltage 12: Input current
13: Internal temperature 14: Fan status
15: SD card status 16: USB status
See details on Page35 Status Indication of Running Channel & Status Indication of Channel Control.

Press ***STATUS-x*** button when running program to switch between multipage information displays, as below:

Cells voltage information
1: Cells voltage
2: Cells voltage sum
3: Maximum cells voltage difference
4: Balance current indication

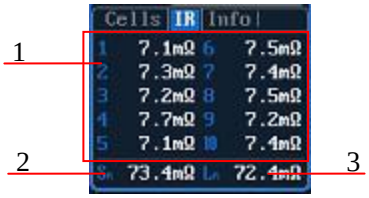

IR information
1: Cell internal resistance
2: Pack internal resistance
3: Line resistance

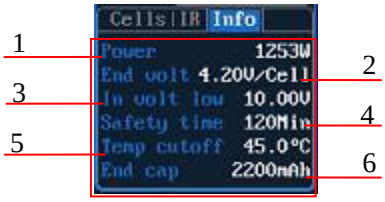

Information page
1: Power
2: End voltage
3:Lowest input voltage
4: Safety time
5: Temp. cutoff
6: End charge capacity

Cycle charge status
1: Cycle charge status

Note: Different types of batteries and programs have different multipage information displays, see details below:

Types of battery	Cells	IR	Info	Cycle
LiXX	√	√	√	√
NiXX	×	×	√	√
Pb	×	×	√	√

Press ***STATUS-x*** button for **2 seconds** when running program to pop up *MODIFY* interface, to modify the current and discharge voltage parameters online, as below:

Press ***STOP/START-x*** button when running program to stop running, and press ***STOP/START-x*** button again to return to the initial interface.

● Error Messages

When the 4010DUO is running, the system will stop the channel immediately and pop up the red dialog box and the buzzer alarms if it detects an error, as below:

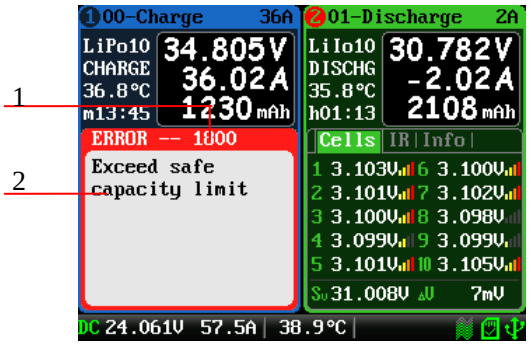

1: Error number
2: Error message
See all details on Page36 Error Messages in Appendix

● Program Edit

After adding new programs or editing saved programs, the system will enter *MEMORY SETUP* interface. Users can set or modify the program on this interface.

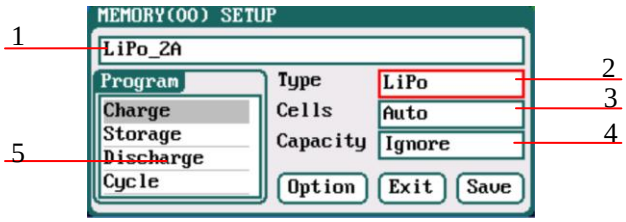

1: Program name 2: Types of battery
3: Number of cells
4: Battery capacity 5: Available program

Note: 1. When editing the program name, the character can be selected by turning the ***Knob***, and clicking the ***Knob*** to confirm the selected character. Clicking ***TAB/SYS*** button will delete the character. If the program name is empty, the system will name it automatically.
2. If the Editing program is the built-in program, the program name and the types of battery parameters cannot be changed.

After setting the basic parameters of a battery, click "Option" to enter *MEMORY OPTION* interface, after setting click "Back" to return to *MEMORY SETUP*, and click "Save" to save.

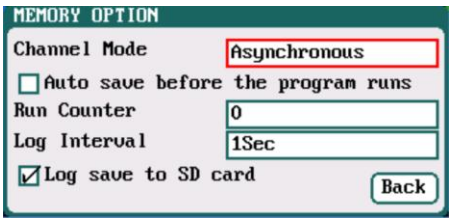

Channel Mode: Asynchronous (default);
Synchronous
Run Counter: 0-999; default: 0
Log Interval: 0.5-60Sec; default: 1Sec

Note: 1. Channel Mode has asynchronous, synchronous available, see more details on Page33 Important Notes.
2. If select synchronous mode, the maximum current setting will change from 40A to 70A.
3. For built-in program, the *Auto save before the program runs* option is ticked by default.

◆ LiXX Battery Charge/Discharge Setup

After adding a program, it will switch to LiXX battery in *Type* option on the *MEMORY SETUP* interface, and set the number of *cells* and *capacity*, if there is no setting for the number of cells, the charger will set *Auto* by default. After editing all parameters for the program, click "Save" to save and return to the previous interface.

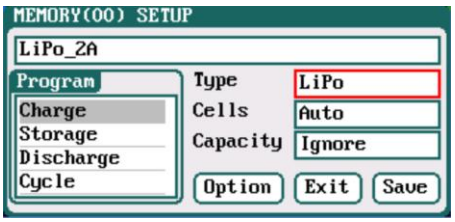

As shown in the above picture, the program of LiPo, LiIo, LiFe battery has: *Charge, Storage, Discharge, Cycle and Balance Only.*

❑ LiXX Battery Charge Setup

Select *Program→Charge* to enter *Charge* setup interface.

Chg Current: *0.05A-40A; default: 2A*
Chg Mode: *Slow Balance*，*Normal Balance(default)*，
Fast Balance，*User Balance, Not Balance*
Chg End Current: *1%-50%; default: 10%*
Chg Cell Volt: *3.85V/Cell-4.35V/Cell;*
Default: 4.2V/Cell

Note:1. When the value of charge cells voltage exceeds the recommended value (LiPo 4.2V, LiIo 4.1V, LiFe 3.6V), the charger will sound an alarm with beep tones. As long as the user changes the values, the main charging interface, "battery types" and "cells voltage" setting value will be displayed alternately.
2.Tick ***Show*** to display this program on *MEMORY SETUP*, and the built-in program is ticked by default.

➲ LIXX Battery Not Balance Charge Setup

When switch to *Not Balance* on *Chg Mode*, Only *Chg End Current* is available for charging end condition, and "Set..." behind *Chg Mod* and *Chg End Current* are inactive.

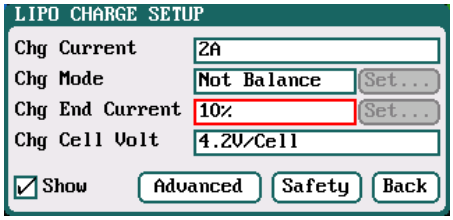

Note: 1. The charger first charges with constant current (CC) according to the user setting, then turns to constant voltage (CV) when the charging voltage reaches the peak point. In the CV phase the current gradually falls, and the charger will terminate charging when the current falls below the percentage of the configured charge current.For example: the default value of Chg Current is 2A, and the default value of Chg End Current is 10%

Chg End Current=2A*10%

=0.2A

Therefore it stops charging when the discharging current reduces to 0.2A.

➲ LIXX Balance Charge Setup

When switch to *Slow Balance, Normal Balance, Fast Balance or User Balance* on *Chg Mode* to active "Set..." button and click it to enter *Balance* mode setup interface.

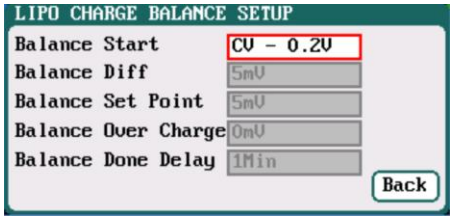

Balance Start : *CV,CV-0.1V—1V,Alway*

Default: CV-0.2

If the voltage for balance charge is 4.2V, Balance Start set to CV-0.2V; therefore the charger will start to balance the battery cells when the voltage reach to 4.2V-0.2V=4V

Note: Charge mode has four modes available, *Slow Balance, Normal Balance, Fast Balance* and *User Balance*. When selecting *Balance* mode, balance board must be connected except for connecting 1S battery. The balance charge mode is for balancing the voltage of battery cells while charging. In this mode the battery balance lead must be connected to the balance port allowing the charger to monitor the voltage of individual cells and adjust the input current fed into each cell to equalize the voltage in all cells.

When switch to *User Balance* mode on *Chg Mode;* the *Balance Diff, Balance Set Point, Balance Over Charge* and *Balance Done Delay* are available, after setting, click"Back" to return to the previous interface.

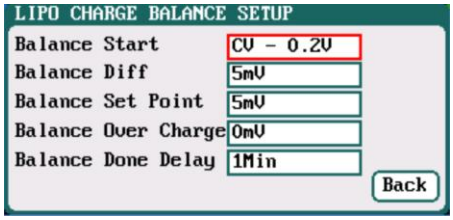

Balance Diff: *1mV-10mV; default:5mV*

Balance Set Point: *1mV-50mV; default:5mV*

Balance Over Charge: *0mV-10mV; default:0mV*

Balance Done Delay: *0Min-20Min; default:1Min*

Note: If *Balance Diff* value is lower, the voltage difference between cells will be lower and the balancing will take more time before the program ends.If *Balance Set Point* value is lower, the battery will be closer to the setting cut-off voltage and the time taken will be longer before the program ends.*Balance Over Charge*, the maximum overcharge compensation voltage acts as accelerated charge, and the larger the value, the more obvious the accelerated charge.

For example: Charge Lipo with Vstd, set *Balance Over charge* to Vboc, the cells' internal Resistance detected is Ri, when the charge current is Ia, the actual CV value of cells is Va

IF Ri*Ia > Vboc THEN

Va = Vstd + Vboc

ELSE

Va = Vstd+Ri*Ia

Please set this parameter after understanding fully, or keep the default value at 0.

The value of *Balance Done Delay* is larger; the battery is closer to the setting cut-off voltage when the program ends.

Switch to *Balance charge* mode on *Chg Mode*, and click "Set..." behind *Chg End Current* to enter *CHARGE BALANCE End SETUP* interface for setting.

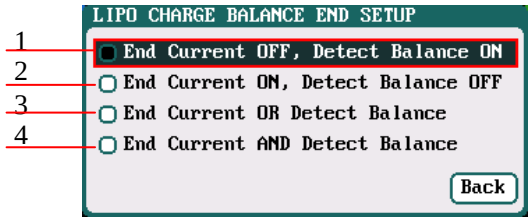

1: Only detect Balance, while End Current is invalid
2: Only detect End Current, while Balance is invalid
3: Detect End Current or Balance
4: Detect End Current or Balance

➲ LiXX Battery Charge Advanced Setup

Click "Advanced" to enter *LIXX ADVANCED SETUP*, after setting, click"Back"to return to the previous interface.

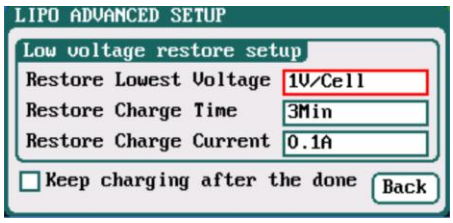

Restore Lowest Voltage:

0.5V/Cell-2.5V/Cell; Default: 1V/Cell

Restore Charge Time:

1Min-5Min; default: 3Min

Restore Charge Current:

0.02A-0.5A; default: 0.1A

Note: 1. If the battery has been over-discharged, the charger will then charge it with a low current at the beginning. The charger then turns to normal charging program when the battery voltage reaches the normal value; otherwise the program will stop running.

2. After charging, the battery may not be completely charged; tick *Keep charging after the done* to charge the battery with smaller current when charging ends.

➲ LiXX Battery Charge Safety Setup

Click "Safety" to enter *CHARGE SAFETY SETUP*, after setting click"Back" to return to the previous interface.

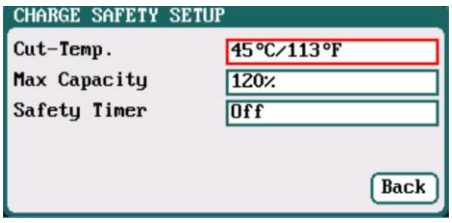

Cut-Temp: *20℃-80℃; default: 45℃*

Max Capacity: *50%-200%; default: 120%*

Safety Timer: *0Min-9999Min; default: off*

Note: *Cut-Temp*. is the maximum safety temperature of the battery. If the temperature sensor detects the set value, the program will stop running in order to protect the battery from being damaged by high temperature.

❑ LiXX Battery Storage Setup

This mode is for storing LiXX battery that will not to be used for an extended period. The charger determines whether to charge or discharge the battery based on the configured target voltage. If the battery voltage exceeds the target storage voltage it will start to discharge, while lower than the target storage voltage it will start to charge.

Select *Program→Storage* to enter *Storage* setup interface.

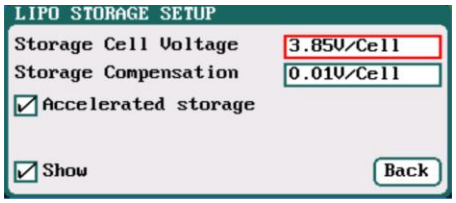

Storage Cell Voltage:*3.7V/Cell-3.9V/Cell; Default: 3.85V/Cell*

Storage Compensation: *0V/Cell-0.2V/Cell; Default: 0.01V/Cell*

Note: 1. *Accelerated storage:* accelerated storage via internal resistance correction. Tick *Accelerated storage* to activate accelerated storage.

2. *Storage Compensation* is the compensation for the battery voltage fallback: for storage charge, the actual storage voltage=Storage Cell Voltage + Storage Compensation; for storage discharge, the actual storage voltage=Storage Cell Voltage - Storage Compensation.

❑ LiXX Battery Discharge Setup

Select *Program→Discharge* to enter *Discharge* setup interface.

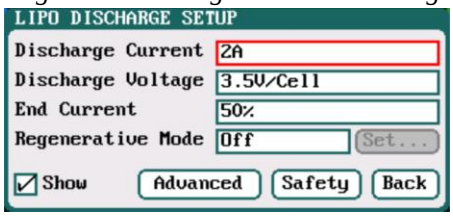

Discharge Current: *0.05A-40A; default: 2A*

Discharge Voltage: *3V/Cell-4.1V/Cell; Default: 3.5V/Cell*

End Current: *1%-100%; default: 50%*

Regenerative Mode: *OFF (default), To input, To channel*

Note: 1.The charger first discharges with constant current (CC) according to the user setting then turns to constant voltage (CV) when it reaches the discharge voltage. In the CV phase the current gradually falls, and the charger will terminate discharging when the current falls below the percentage of the configured discharge current.

2. Regenerative mode has three available settings: *OFF, To input, To channel*, see more details on Page33 Important Notes.

➲ To channel Setup

When selecting to *To channel* on *Regenerative Mode*, "Set..." button changes from inactive to its operational status, and click to enter *To channel* setup interface, after setting click "Back" to return to the previous interface.

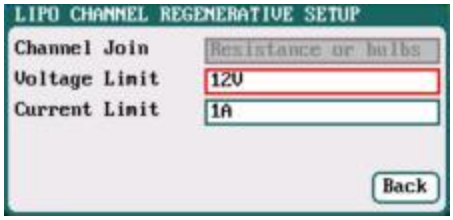

Channel Join: *Not available*

Voltage Limit: *0.1V-40V; default: 12V*

Current Limit: *0.05A-40A; default: 1A*

Note: This setting is mainly in charge of controlling the regenerative voltage and current,to prevent the charger from being damaged by regenerative charge.

➲ LiXX Battery Discharge Advanced Setup

Click "Advanced" to enter *LiXX DISCHARGE ADVANCED SETUP* interface, after setting click"Back" to return to the previous interface.

Note: 1.Tick *Extra Discharge Enable* to activate, see more details on Page34 Extra Discharge.
2.Tick *Balance enable* to active balance discharge; when discharge enters the CV phase, it starts to balance the cell voltages.

➲ LiXX Battery Discharge Safety Setup

Click "Safety" to enter *DISCHARGE SAFETY SETUP* interface, see details about setting on Page14 LiXX Battery Charge Setup.

❑ LiXX Battery Cycle Setup

Select *Program→Cycle* to enter *Cycle* setup interface, after setting click"Back" to return to the previous interface.

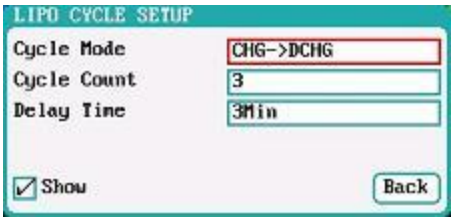

Cycle Mode: *CHG→DCHG (default); DCHG→CHG*
Cycle Count: *1-99; default: 3*
Delay Time: *0Min-9999Min; default: 3Min*

❑ LiXX Battery Only Balance Feature

Select *Program→Balance Only* to enter *Balance Only* setup interface, after setting click"Back" to return to the previous interface.

Note: *Only Bal* is the program to activate the balance feature, the charger will not charge or discharge the battery.

◆ NiXX Battery Charge/Discharge Setup

After adding a program, it will switch to NiXX battery in *Type* option on the *MEMORY SETUP* interface. Set the capacity, the number of cells for NiXX battery cannot be set, and the charger sets *Auto* by default, after editing all parameters for the program, click"Save" to save and return to the previous interface.

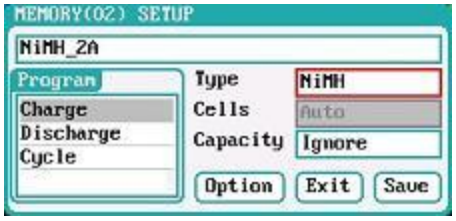

As shown in above picture, the program of NiMH, NiCd have the following modes: *Charge, Discharge* and *Cycle*.

❑ NiXX Battery Charge Setup

Select *Program→Charge to* enter *Charge* setup interface.

Chg Current: *0.05A-40A; default: 2A*
Chg Mode: *Normal (default), Reflex*

Note: Charge Mode has *Normal and Reflex* modes available; use reflex mode to charge the battery, it can reduce the heat in the battery; please see charging principle on Page33 Important Notes.

➲ NiXX Battery Charge Advanced Setup

Click "Advanced" to enter *NiXX CHARGE OPTION SETUP* interface, after setting click "Back" to return to the previous interface.

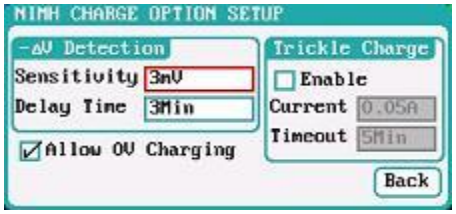

Sensitivity: *1mV-20mV; default: 3mV*
Delay time: *0Min-20Min; default: 3Min*

Note: Tick *Allow 0V Charging* to allow charge with 0V.
Allow 0V Charging suits for some applications (such as charging the battery pack in the transmitter, the circuit in series with a diode).

Tick *Trickle Enable→Enable* to active trickle charge and set the parameters, after setting click"Back" to return to the previous interface.

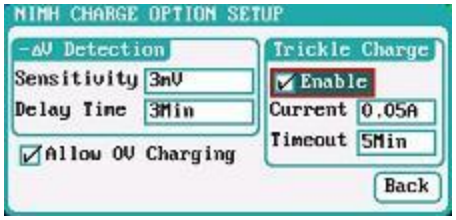

Trickle current: *0.02A-1A; default: 0.05A*
Trickle timeout: *1Min-999Min; default: 5Min*

Note: Tick *Enable* to active trickle charge.
Trickle charge is based on a very low current to charge the battery for a period, to reduce battery consumption and extend battery usage time.

➲ NiXX Battery Charge SafetySetup

Click "Safety" to enter *CHARGE SAFETY SETU* interface, see details about setting on Page14 LiXX Battery Charge Setup.

❑ NiXX Battery Discharge Setup

Select *Program→Discharge* to enter *Discharge* setup interface.

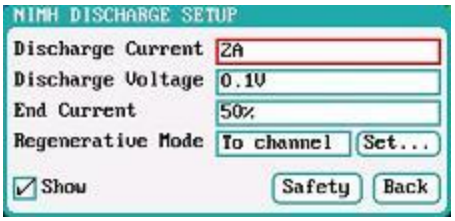

Discharge Current: *0.05A-40A; default: 2A*
Discharge Voltage*: 0.1V-40V; default: 0.1V*
End Current: *1%-100%; default: 50%*
Regenerative Mode*: OFF (default), To input, To channel*

Note: 1. Regenerative mode has three modes available*: OFF, To input, To channel*. See more details on Page33 Important Notes.
2.*To channel* Setup please see Page14 LiXX Charge/Discharge Setup.

➲ NiXX Battery Discharge Safety Setup

Click "Safety" to enter *DISCHARGE SAFETY SETUP* interface, see details about setting on Page14 LiXX Battery Charge Setup.

❑ NiXX Battery Cycle Setup

Select *Program→Cycle to* enter *Cycle* setup interface, see details about setting on Page18 LiXX Battery Cycle Setup.

◆ Pb Battery Charge/Discharge Setup

After adding program, it will switch to Pb battery in *Type* option on the *MEMORY SETUP* interface. Set the number of *cells* and *capacity*, after editing all parameters for program, click"Save"to save and return to the previous interface.

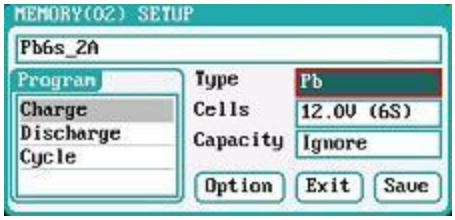

As shown in above picture, the program of Pb battery has the following modes: *Charge*, *Discharge* and *Cycle*.

❑ Pb Battery Charge Setup

Select *Program→Charge* to enter *Charge* setup interface.

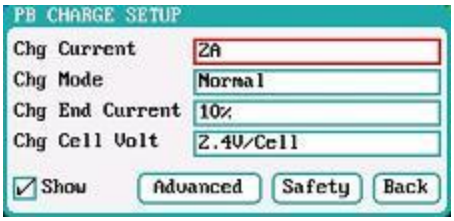

Chg Current: *0.05A-40A; default: 2A*
Chg Mode: *Normal (default), Reflex*
Chg End Current: *1%-50%; default: 10%*
Chg Cell Volt: *2V/Cell-2.6V/Cell; Default: 2.4V/Cell*

Note: 1.The charger first charges with constant current (CC) according to the user setting then turns to constant voltage (CV) when the charging voltage reaches the peak point. In the CV phase the current gradually falls, and the charger will terminate charging when the current falls below the percentage of the configured charge current.

2.Charge mode has *Normal, Reflex* two modes available, about the *Reflex* mode (Reflex) please see Page33 Important Notes;

➲ Pb Battery Charge Advanced Setup

Click "Advanced" to enter *PB ADVANCED SETUP* interface, see details about setting on Page14 LiXX Battery Charge Setup.

➲ Pb Battery Charge Safety Setup

Click "Safety" to enter *CHARGE SAFETY SETUP* interface, see details about setting on Page14 LiXX Battery Charge Setup.

❑ Pb Battery Discharge Setup

Select *Program→Discharge to* enter *Discharge* setup interface, see details about setting on Page17 LiXX Battery Discharge Setup.

❑ Pb Battery Cycle Setup

Select *Program→Cycle* to enter *Cycle* setup interface, see details about setting on Page18 LiXX Battery Cycle Setup.

4010DUO Parameters Setup

● 4010DUO Parameters Setup

Press ***TAB/SYS*** button for **2 seconds** on the initial interface to enter the *SYSTEM MENU* interface, setting and testing of the system parameters, storage and servo can be completed on this interface.

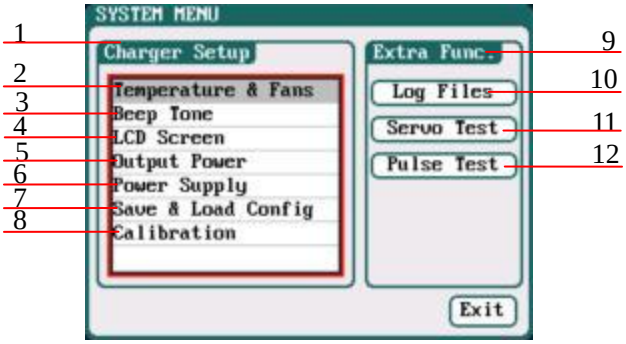

1: Charger Setup Menu 2: Temp. & Fans Setup
3: Beep Tone Setup 4: LCD Setup
5: Output Power Setup 6: Power Supply Setup
7: Save & Load Configuration Setup
8: Calibration9: Extra- Function
10: Log Files Manage 11: Servo Test
12: Pulse Test

◆ Charger Setup

After setting all parameters, click "Save" to save and return to the previous interface.

❑ Temp. & Fans Setup

Select *SYSTEM MENU→Charger Setup→Temperature&Fans to* enter the setup interface, after setting click "Save"to save and return to the previous interface.

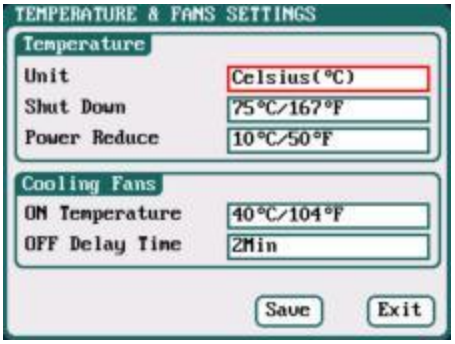

Note: When the charger's internal temperature reaches the *ON Temperature*, the fan will start automatically to dissipate heat, and adjust speed automatically depends on the temperature increasing or decreasing. When the temperature exceeds the *Shut Down - Power Reduce* temperature, the charger will stop increasing (temp. shown in orange) by reducing the highest power limit. When the temperature reaches Shut Down temperature, the charger will shut down. [When temp. >Shut Down-3, the temperature is shown flashing in red]. When the temperature is lower than the *ON Temperature*, the fan will keep running within the setting time of OFF Delay Time.

❑ Beep Tone Setup

Select *SYSTEM MENU→Charger Setup→Beep Tone to* enter the setup interface.

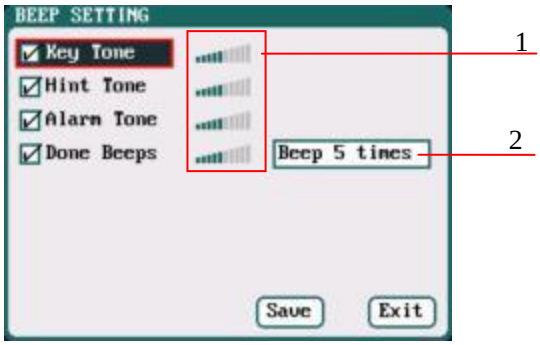

1: Volume adjustment display
2: Program Done Beep Tones Selection
Beep 5times (default)
Beep 30second
Beep always
Beep 3minutes

Note: Tick the appropriate tone, and then go to Volume adjustment bar to adjust the volume; If the beep tone is not ticked the corresponding volume adjustment shows inactive; *Done Beeps* have many styles available, as shown above.

❑ LCD Setup

Select *SYSTEM MENU→Charger Setup→LCD Screen* to enter the setup interface.

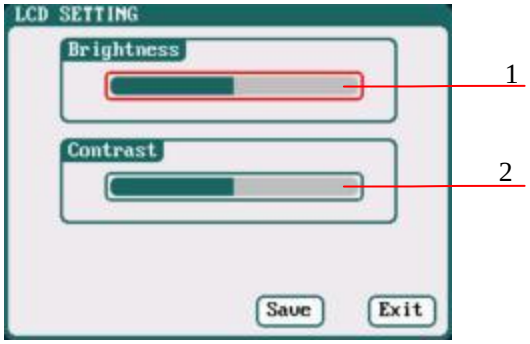

1: Brightness adjustment
2: Contrast adjustment

❑ Output Power Setup

Select *SYSTEM MENU→Charger Setup→Output Power to* enter the setup interface.

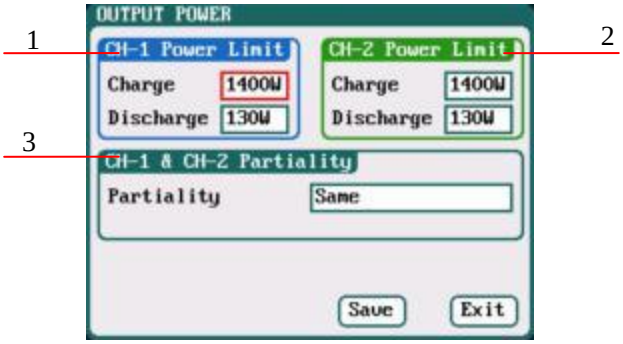

1/2: CH-1/CH-2 Output Power Setup
Charge: Maximum Power Limit for charge
5W-1400W; default: 1400W
Discharge: Maximum Power Limit for discharge
5W-130W; default: 130W
3: CH-1/CH-2 Channel Partiality Selection
Same (default), CH-1, CH-2

Note: The maximum power limit for regenerative discharge is equal to the maximum power limit for charge.
When the input or output power of charger is limited, it will trigger the CH-1/CH-2 Channel Partiality.
When Partiality switches to *Same*, charger assigns the output power equally to two channels, switch to CH-1 or CH-2, the charger will give priority to the selected channel output, while the output power of other channel may be reduced to 50W (discharge for 5W).

❑ Power Supply Setup

Select *SYSTEM MENU→Charger Setup→Power Supply* to enter the setup interface.

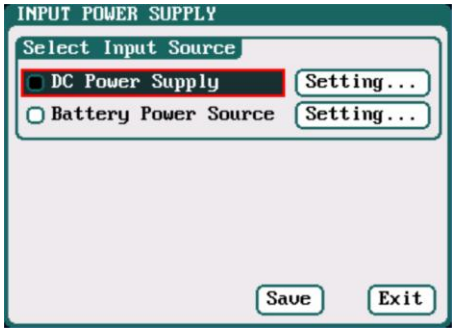

After selecting input source, click the "Setting..." followed by the option, enters the relevant power supply setting to set the parameters, after setting click "Save"to save and return to the previous interface.

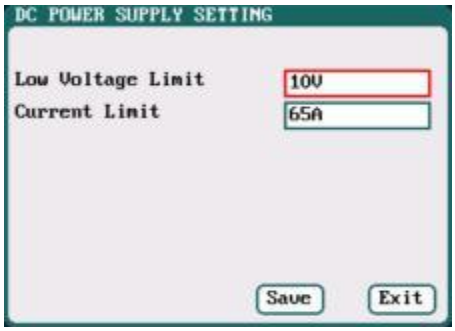

Low Voltage Limit：*9V-48V; default: 10V*
Current Limit：*1A-65A; default: 65A*

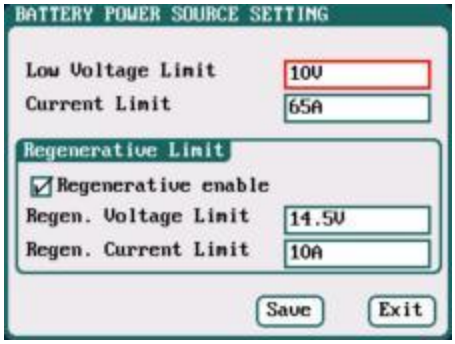

Low Voltage Limit：*9V-48V; default: 10V*
Current Limit：*1A-65A; default: 65A*
Regen. Voltage Limit：*9V-48V;default:14.5V*
Regen. Current Limit：*1A-65A;default:10A*

❑ Save & Load Configuration Setup

Select **Save & Load Config** on *SYSTEM MENU* and enter the setup interface.

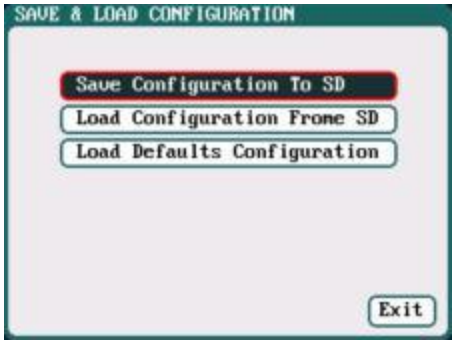

Note: 1. Users can save configuration to SD card and re-load via the SD card if needed.
2. After loading the configuration files, in addition to *Calibration Select*, it will cover all settings within the device.

❑ Calibration

Select *SYSTEM MENU→Charger Setup→Calibration* to enter the setup interface.

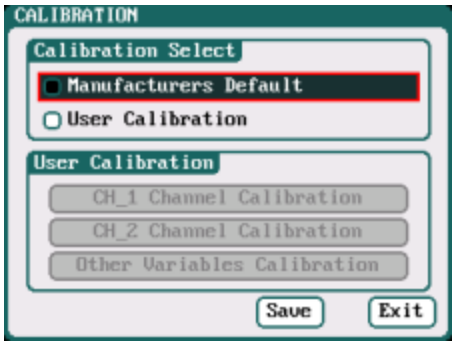

If users select *User Calibration*, the *User Calibration* option changes to active status; then select channel to enter the interface to calibrate.

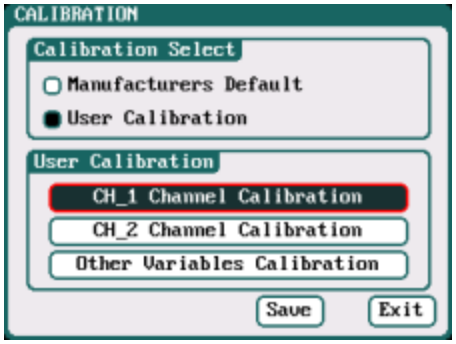

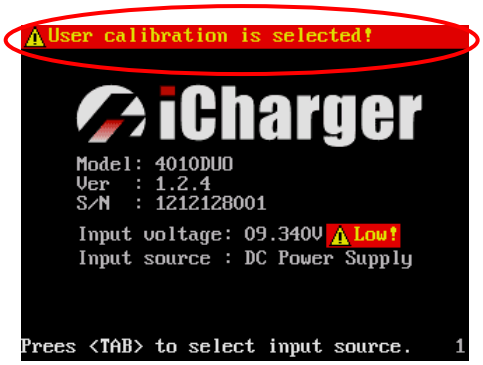

Note: User Calibration has *CH-X Channel Calibration* and *Other Variables Calibration* two options, users can calibrate charger for one channel alternatively. If user selects *User Calibration*, the corresponding message will appear in the interface after booting the charger, as shown in the right picture above.

Select *CH-1/2 Channel Calibration* to enter the channel calibration interface, Select *Other Variables Calibration* to enter the other variable calibration; after Calibration, click "Save" to save and return to the previous interface; click "Default" to load default value.

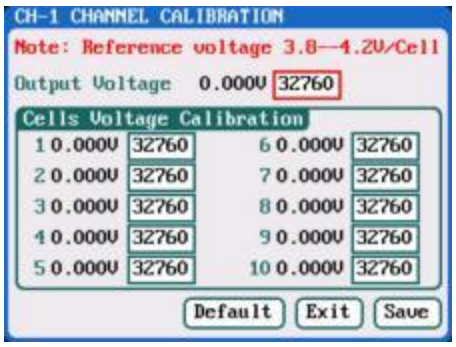

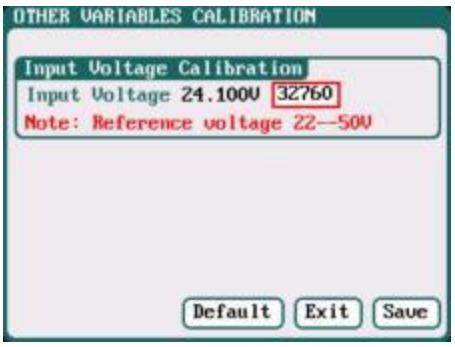

◆ Extra Function

❑ Log Files Manage

Select *SYSTEM MENU→Extra Function→LOG FILES* to enter the manage interface.

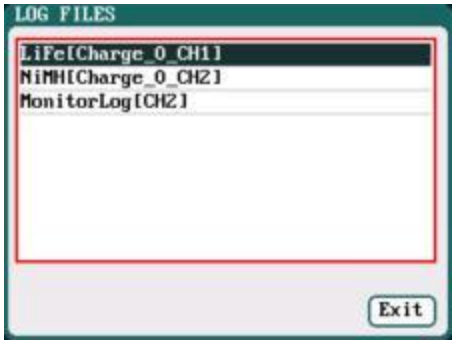

First select and click the .TXT files when managing log files, and the system will pop up the *LOG FILES OP* dialog box.

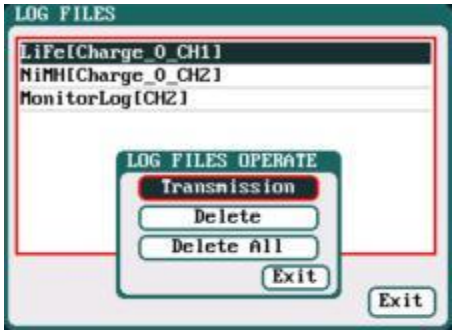

Log Files Manage Dialog

Transmission: transmission to PC

Delete: delete files

Delete: delete all files

The charger must be connected with computer when select *Transmission* and the client software must have identified to the charger.

Select *Delete* to pop up the *LOG FILE DELETE* dialog box, Select ***Yes*** to delete this file, select ***No*** to cancel.

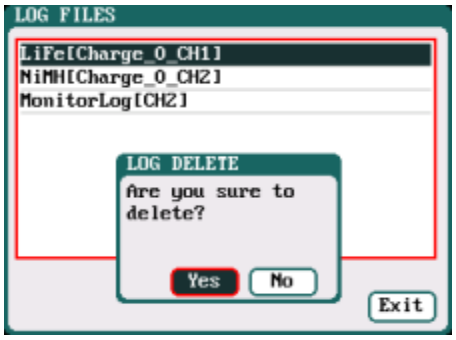

❑ Servo Test

Select *SYSTEM MENU→Extra Function→SERVO TEST* to enter servo test interface; insert Servo into ***J1*** or ***J2*** port to test (only ***J1*** port supports Speed Test, ***J2*** can also be used as an external power source).

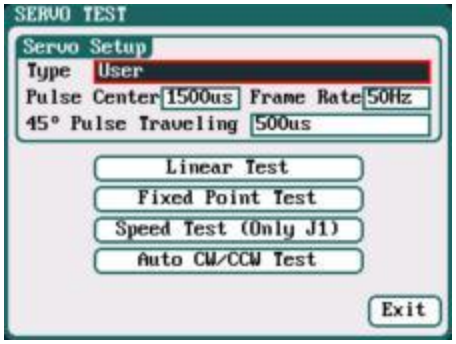

Type: *Analog servo (1500us/50Hz)*

Digital servo (1500us/333Hz)

Digital servo (760us/560Hz)

User: Pulse Center: 700us-1600us

Frame Rate: 40Hz-700Hz

45° Pulse Traveling:100us-1000us

J2 can be used as an external power source: If ***J1(5V/1A)*** cannot provide the voltage needed for the servo, please connect through ***J2*** with external power source.

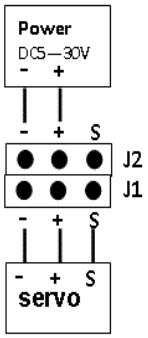

Select the test mode and go to the following corresponding interface.

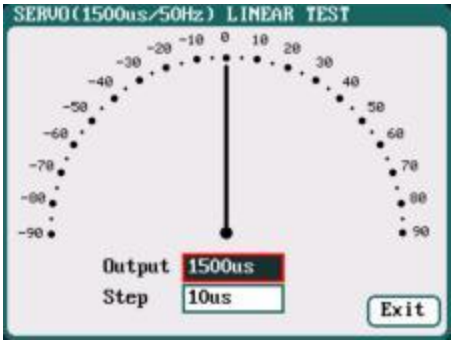

Liner Test: When turning the knob, the pointer deflects with step of 10us, and the servo responds accordingly.

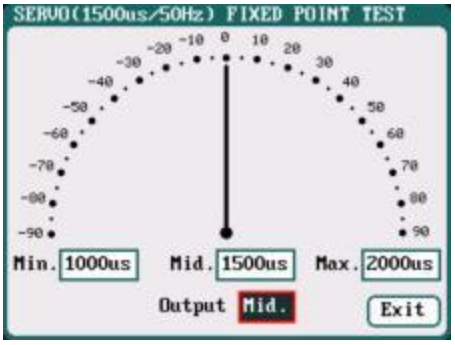

Fixed Point Test: When turning the knob, the pointer deflects among each setting value and the servo responds accordingly.

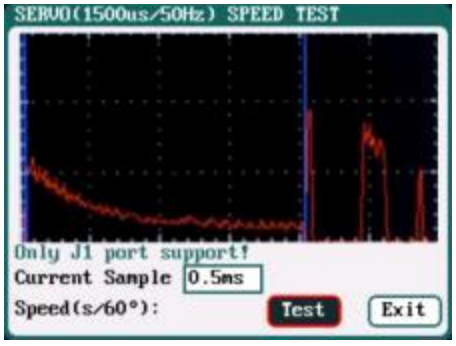

Speed Test: Click ***Test*** to read the test curves and test results.

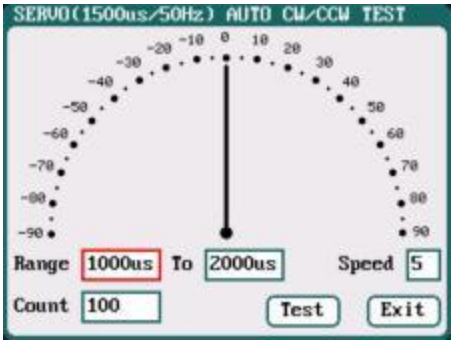

Auto CW/CCW Test: Click ***Test*** button then the pointer deflects the setting times at a set rate back and forth among each setting values, and the servo responds accordingly.

❑ **Pulse Measurement**

Select *SYSTEM MENU→Extra Function→Pulse Test* to enter the pulse test interface, only ***J2*** port supports the input signal of Pulse Measurement.

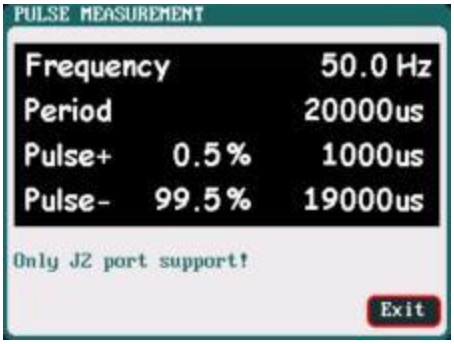

● USB & SD Card Use

4010DUO is the HID device of USB, supported by windows system directly, dispense with installing additional drivers. The USB icon will light up on the lower right corner of the screen when the 4010DUO connects with computer normally.

The SD icon will light up on the lower right corner of the screen when the SD card is inserted. If 4010DUO connects with the USB without running a program, the new added U disk can be found on the "My Computer" of the PC, and can operate the file. *Log* files are stored in the *X: \ Junsi \ iC4010DUO \Log* folder and config. files are stored in the *X:\Junsi\iC4010DUO\System* folder.

Note: 1. The file system of SD card must be FAT or FAT32.
2. Data in SD card needs to be backed up in case it is lost.

● Warranty & Service

① The product from the date of purchase enjoys free repair service within one year under normal conditions of use.
② Over the warranty, if replacement parts are needed the appropriate charge for components and repair will apply.
③ During the warranty period, any of the following circumstances will not enjoy free repairs:

1) Failure to use in accordance with the requirements of the user manual.
2) Failure or damage caused by the unauthorized user dismantling, appending or modifying the charger.
3) Failure or damage due to natural disasters, bruises, collisions and incorrect supply voltages.

4010DUO Firmware Upgrades

① Go to the website *http://www.jun-si.com/UploadFiles/Upgrader.rar* to download above VER1.9 version upgrader zip file "Upgrader.rar ", and extract to any disk on the PC.

② Open the extract directory *X:\upgrader\upgrader.exe*, double click" upgrader.exe "to run the upgrader and enter program interface.

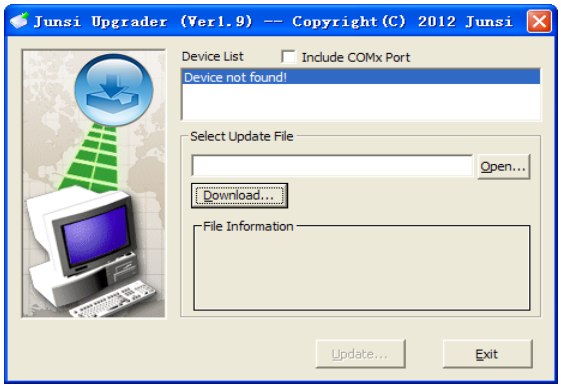

③ Click "Open..."to open the firmware file. If there is no firmware file on the PC, click "Download..." to open the download window, and find the corresponding device firmware of 4010DUO, click'Download...' to download the firmware file to the PC.

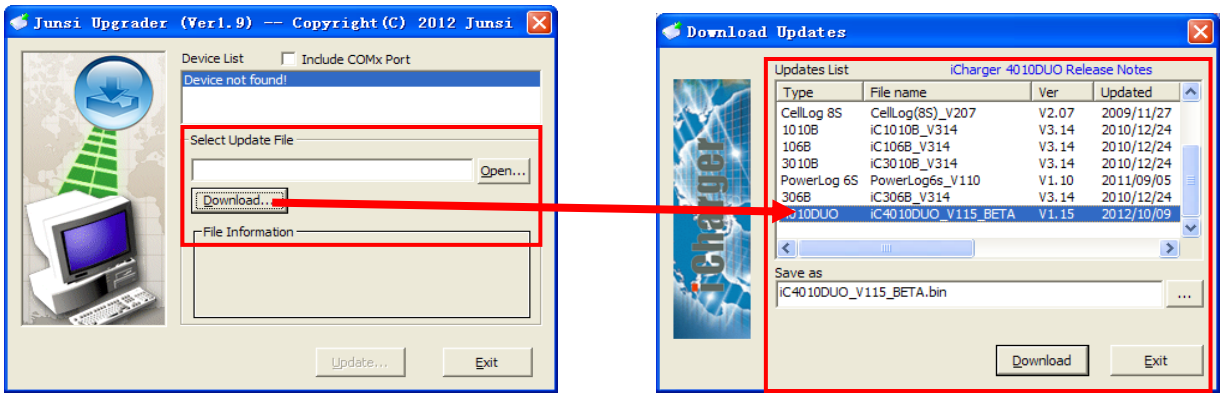

④ Connect 4010DUO charger to the PC via USB (windows system directly supports the device, dispensing with installing additional drivers). When the device information appears in Device List column, this shows the upgrade tool has identified the device.

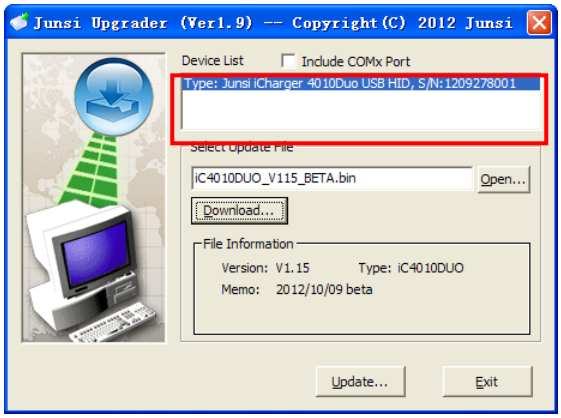

⑤ Click the iron "Update..." on the lower right corner, then the upgrade progress bar will appear on the lower left corner, a tone sounds for upgrade completion when the upgrade progress bar has completed.

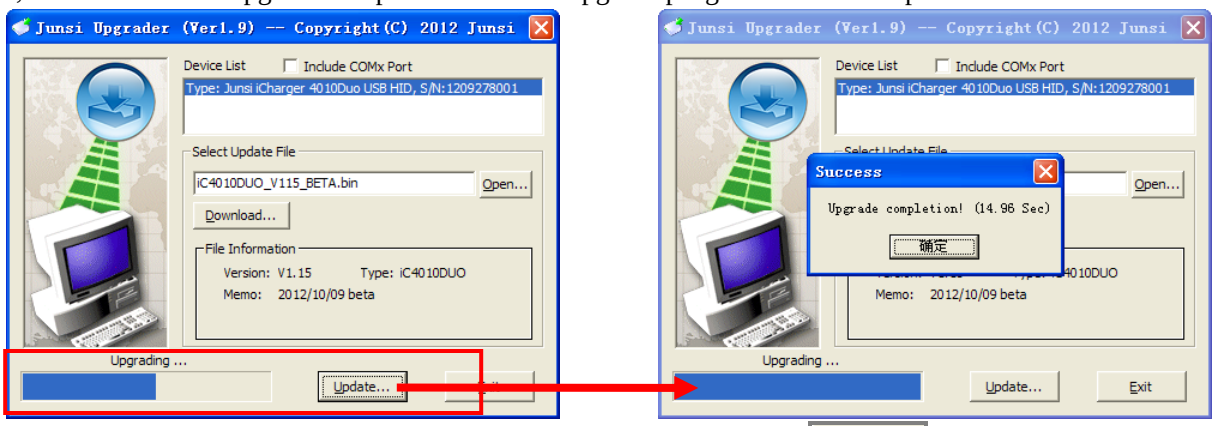

Note: 1. Upgrade failed in the case of not power outages, click "Update..." to upgrade again.

2. Upgrade failed in the case of power outages, power up again and press ***knob***, ***STATUS-2*** and ***STOP/START-2*** buttons at the same time and repeat the above steps to upgrade again.

Use Logview for 4010DUO

First, gratitude to the development team of Logview, more details please see *http://www.logview.info.*

Communication steps:

① To install the Logview software, start the procedure of *X:\ logview \ LogViewInstaller.exe* (here X is the drive letter designator for the CD-ROM drive).

② Connect the iCharger with PC via USB port (make sure USB driver has been installed)

③ Start **LogView**

1) Please choose language first;

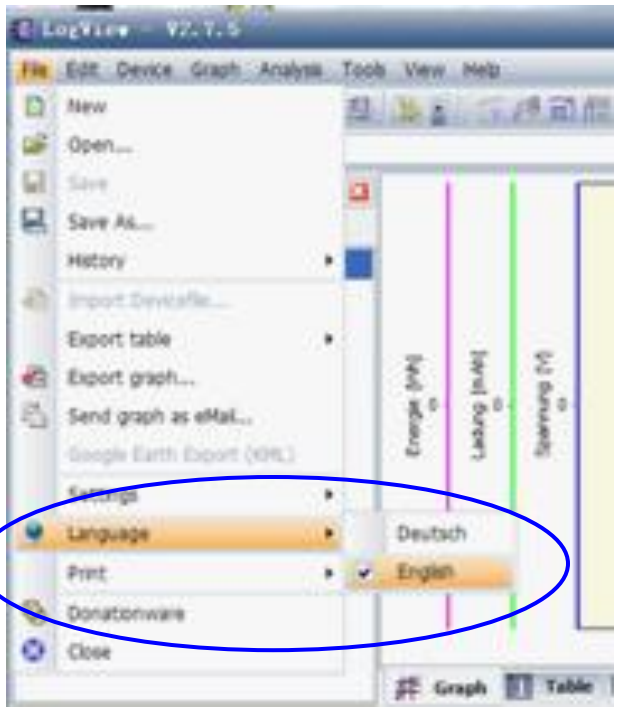

2) Choose ***Device →Choose device and port***;

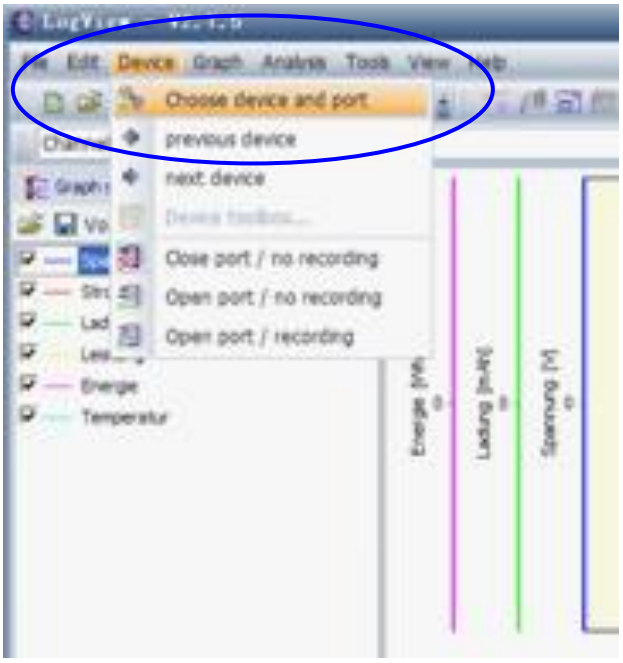
Edit Device Graph Analysis Tools View Help
Choose device and port
previous device
next device
Close port / no recording
Open port / no recording
Open port / recording

3) Choose ***Junsi iCharger4010DUO*** in the following options of ***Device***, and then choose the correct communication Port;

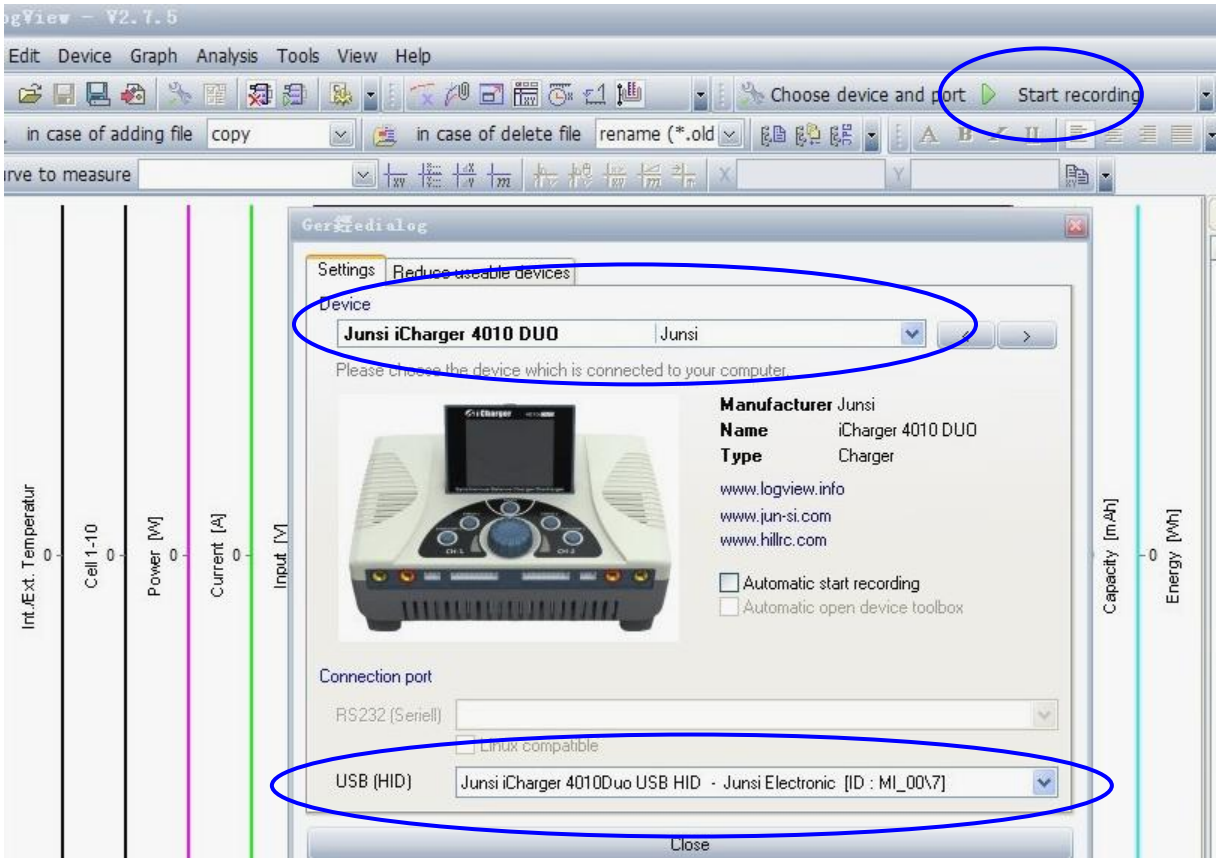

4) Start iCharger charge/discharge mode, then click ***Start recording*** to record data. See other functions of this software in *"Help"*.

Important Notes

● Reflex Charge Mode:

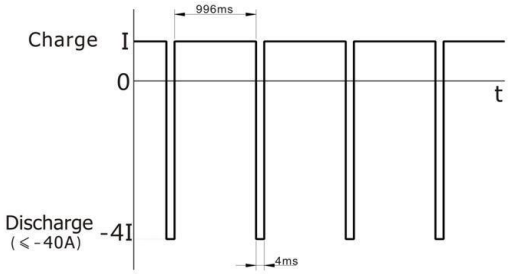

Note: Reflex charge mode only supports NiMH and Pb battery. Does not support lithium battery.
Using reflex charge mode to charge battery can reduce effectively the heating of the battery.Go to the *MEMORY SETUP* → *Charge* → *Chg Mode* to select *Reflex* mode.

● Power Regenerative Mode:

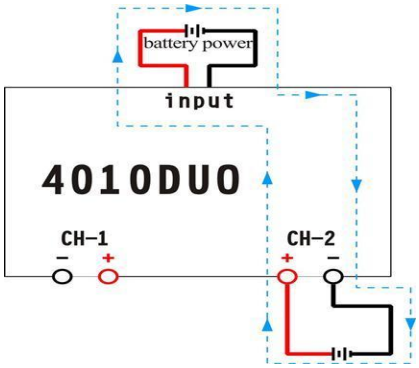

1: Temperature setup
Unit: *Celsius (default), Fahrenheit*
Shut Down:*60℃-75℃;default:75℃*
Power Reduce:*5℃-20℃;default:10℃*
2: Cooling Fans setup
ON Temperature:*30℃-50℃;default:40℃*
OFF Delay Time: *0Min-10Min;default:2Min*

● Channel Regenerative Mode:

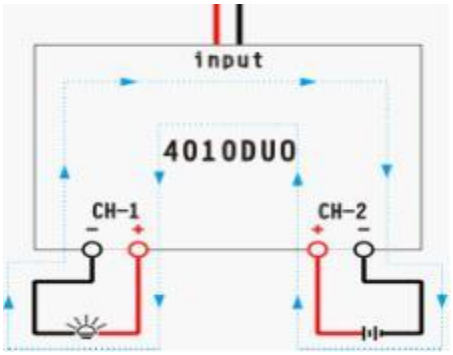

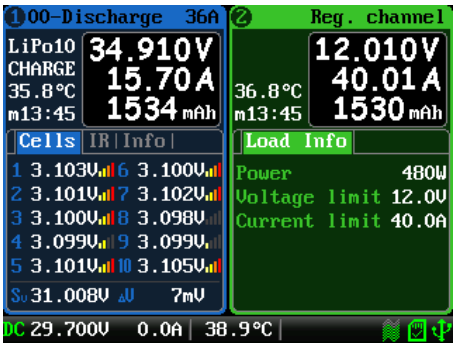

Channel Regenerative Mode

Note: **Channel Regenerative Mode** is for discharging from one channel to another channel, the current version only supports resistor and bulbs discharge, but later versions will support the battery regenerative.
Go to *MEMORY SETUP*→ *Discharge* → *Regenerative Mode* to select *To channel* mode.

Lithium Battery Extra Discharge Mode:

You can expand the iCharger's discharge power capacity by connecting the external capacity resistance. You should pay special attention when expanding the discharge circuit. The balance port must be connected to the battery and the expanding capacity resistance R should be connected in series to the positive connection. (See the following diagram)

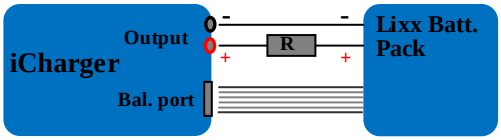

In this mode, the lithium battery discharges through the iCharger and R, P = Pi + Pr, (Pi is the charger's wasted power capacity; Pr is wasted power capacity by resistance). Pi is limited by the set charger's maximum discharge power capacity.

External capacity resistance's setting:

R = Vbat / Iset;

P ==Vbat * Iset;

R: The value of the external capacity resistance

P: Rating capacity of the external capacity resistance

Iset: Discharge current

Vbat: Battery voltage

For example: discharge a pack of 20V lithium battery at 7A
R = 20V / 7A = 2.85Ω
P = 20V X 7A = 140W

Appendix

Status Indication of Running Channel

Status	Status Indication	Status	Status indication
No display	No program, can select program to run	TRICK	Trickle charging status keeps a small current for a while after finishing charging NiCd or NiMH
STOPS	Stop status, press "stop" button to stop the running program	MONITO	Monitor status, only monitors the data
START	Start the program	FLOAT	Float charge, supports Pb battery
CHECK	Check status before running program	SYNCH.	Synchronous status, this channel runs with another channel synchronously
CHARGE	Charge status	LOAD	Load status, this channel works on the load control status of Channel regenerative
DISCHG	Discharge status	WAIT	Waiting status
PRE_C	Pre-charge, program will pre-charge when the cell voltage is too low	CY_DE	Cycle delay status
KEEP	Keep charging status, keep charging for a while after setting pre-charge	OVER!	Over status
BAL	Independent balance status. Only for balancing, not charging the Li-battery,	ERROR	Error status

Status Indication of Channel Control

Status	Status Indication	Status	Status Indication
O.CV	Constant voltage status of output voltage	I.CC	Constant current status of input current
B.CV	Constant voltage status of Li-battery cells voltage	I.CP	Constant status of input power
O.CC	Constant current status of output current	O.C0	0 current regulation status
C.CP	Constant status of output power capacity	O.CP	Total power regulation status
C.TP	Temperature power reduce status	C.BL	Channel imbalance regulation status
I.CV	Constant status of input voltage	O.PC	Channel power containment regulation status

Error Messages

Error NO.	Error Messages	Error Description
02XX	"Input over voltage"	The input voltage is too high
03XX	"Input under voltage"	The input voltage is too low
04XX	"Output over voltage"	The output voltage is too high
05XX	"Low battery voltage"	The voltage of the connected battery is too low
06XX	"High battery voltage"	The voltage of the connected battery is too high
07XX	"Output over current(+)"	Output over current (+)
08XX	"Output over current(-)"	Output over current (-)
09XX	"Input over current(+)"	Input over current (+)
10XX	"Input over current(-)"	Input over current (-)
11XX	"The internal temperature is too high"	The internal temperature is too high
12XX	"The internal temperature is too low"	The internal temperature is too low
13XX	"Connection check error"	Connection check error
14XX	"CH1 & CH2 common-negative connection prohibited"	Common-negative connected to CH1&CH2 is prohibited
15XX	"Battery polarity reversed!"	Battery has been connected with polarity reversed.
16XX	"Internal control error"	Internal control checking error
17XX	"Exceed safe time limit"	Safe time limit is exceeded
18XX	"Exceed safe capacity limit"	Safe capacity limit is exceeded
19XX	"Exceed safe temperature range"	Safe temperature range is exceeded
20XX	"Output connection broken"	Output connection is broken
21XX	"Balance port connection error"	Balance port has a connection error
22XX	"Low cell voltage detected on balance port"	Low cell voltage is detected on balance port
23XX	"High cell voltage detected on balance port"	High cell voltage is detected on balance port
24XX	"Voltage match error. Balance port sum is lower than output."	Voltage matched error, the voltage of the balance port sum is lower than the output one
25XX	"Voltage match error. Balance port sum is higher than output."	Voltage matched error, the voltage of balance port sum is higher than the output one
26XX	"Number of cells doesn't match the setting"	Number of cells connected doesn't match the setting
27XX	"Number of cells setting appears low"	Number of cells setting appears low

28XX	"Number of cells setting appears high"	Number of cells setting appears high
29XX	"Balance not needed, Remove connection from balance port"	Balance port error, Ni-, Pb does not need balance port, but voltage of balance port is detected
30XX	"Balance required!"	Balance port is unplugged
31XX	"Auto detect the number of cells failed, please connect balance or set cells"	Check connection or balance port
32XX	"AD watchdog error"	AD watchdog error
33XX	"Synchronous mode: Channel outputs imbalance"	Channel outputs are imbalance in Synchronous mode
34XX	"This channel is needed to access the resistor or bulb load"	This regenerative channel is needed to access the resistor or bulb load
35XX	"The other channel is occupied"	The other channel is occupied